


## Assembly instructions

---



# Castors for concrete bases

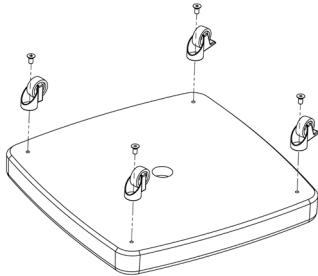

### Scope of delivery

- 2 × Pivoting castors
- 2 × Pivoting-/lockable castors
- 4 × Countersunk screw
- 1 × Allen key

### Instructions

1. Remove the adjustable feet
2. Screw on the castors and attach the pivoting-/lockable castors next to each other