

ASSEMBLY INSTRUCTION


CANTILEVER UMBRELLA - BASE PLATE



- ❶ **Scope of delivery:** 1 x cantilever umbrella, 1 x adapter, 2 x cylinder head screw M8x25 mm, 1 x 2.5 mm Allen key, 1 x 6 mm Allen key, 1 x crank mechanism, (4 x countersunk screw M8x20 mm as an alternative to the 4 countersunk screws M8x25mm, included with the base plate)
- ❷ Mount the adapter on the cantilever umbrella base plate as described in the assembly instructions "Screw-on sleeve for cantilever umbrella."
- ❸ Remove the cantilever umbrella from its packaging and place it on the adapter. (Umbrella canopy must be on the same side as the adapter foot pedal).
- ❹ Screw the umbrella pole to the adapter using the 2 cylinder head screws. You will need the 6 mm Allen key to do this.
- ❺ Now fit the crank mechanism and tighten with the 2.5 mm Allen key.
- ❻ **Putting up the umbrella:**
Step 1: Release the hand wheel at the umbrella pole.
Step 2: Crank the umbrella canopy into extended position.
(The locking slide automatically moves upward as you do so).
Step 3: Set the umbrella canopy to the desired angle and lock the hand wheel in position.
- ❼ The umbrella can be rotated around its own axis using the adapter foot pedal.

ASSEMBLY INSTRUCTION

CANTILEVER UMBRELLA - BASE PLATE

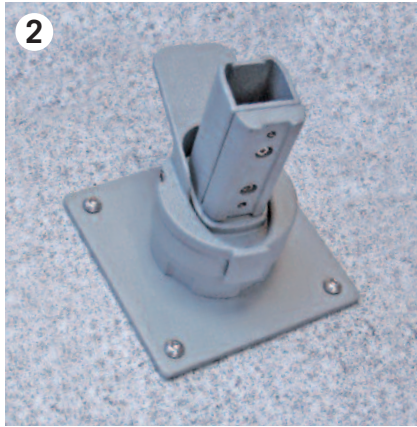

ASSEMBLY INSTRUCTION

SCREW-ON SLEEVE / BASE PLATE



- ❶ **Scope of delivery:** 1 x base plate for cantilever umbrella, 1 x adapter plate, 4 x countersunk screw M8x25 mm (or alternatively 4 x countersunk screw M8x20 mm, included with the cantilever umbrella), 4 x washer, 4 x snap ring, 4 x nut, 4 x flange sleeve, 4 x flat-head screw M10x60 mm, 1 x 5 mm Allen key
- ❷ You will also need the following from the **cantilever umbrella packaging:** 1 x adapter, 1 x 6 mm Allen key
- ❸ Screw the adapter plate to the adapter using the 4 countersunk screws (M8x25 mm or M8x20 mm) and tighten using the 5 mm Allen key.
- ❹ Remove the slide protection (wooden strips) from one side of the pallet.
- ❺ and set the base plate up.
- ❻ Now place one flange sleeve in each of the 4 holes.
- ❼ On the front side of the base plate, align the holes in the adapter plate with the bore holes in the granite plate and insert the flat-head screws (4 x M10x60 mm).
- ❽ Place a washer followed by a snap ring on the back of each screw and secure with a nut.
- ❾ Using the 6 mm Allen key, tighten all screws, holding the nuts on the back in position with a 17 mm offset box wrench as you do so.
- ❿ Now put the base plate in its final position. You can compensate for minor unevenness in the subsurface by screwing the adjusting screws in or out, thus ensuring that the umbrella is standing firmly. To do this, you will need a 17 mm open-ended wrench.

ASSEMBLY INSTRUCTION

SCREW-ON SLEEVE / BASE PLATE

